


Model L-23 Installation Dimensions: Hinged-Lid Configuration

GENERAL EXPLANATION OF LID FUNCTION:

1) Hinged lids require the use of the accessory "HINGED TOP GUIDES". These guides are mounted to the top of the lift system and will push the lid open as it rises. The lid will then remain standing, leaning against the back of the lift column. When the lift is lowered, the lid is closed by gravity.

2) NOTE ABOUT HINGES: The actual HINGES for the lid are part of your cabinetry, and are not provided by Nexus 21.

3) IMPORTANT NOTE ABOUT DEPTH DIMENSION: For the hinged lid to function properly, you MUST allow at least 2" of space between the pivot point of the hinge, and the point where the Hinged Top Guides make contact with your lid. PLEASE BE AWARE some hinge styles, such as European hinges, may INCREASE the overall depth that is required inside the cabinet by a small amount. Please call us if you have any questions about this. Nexus 21 (866) 500-5438.

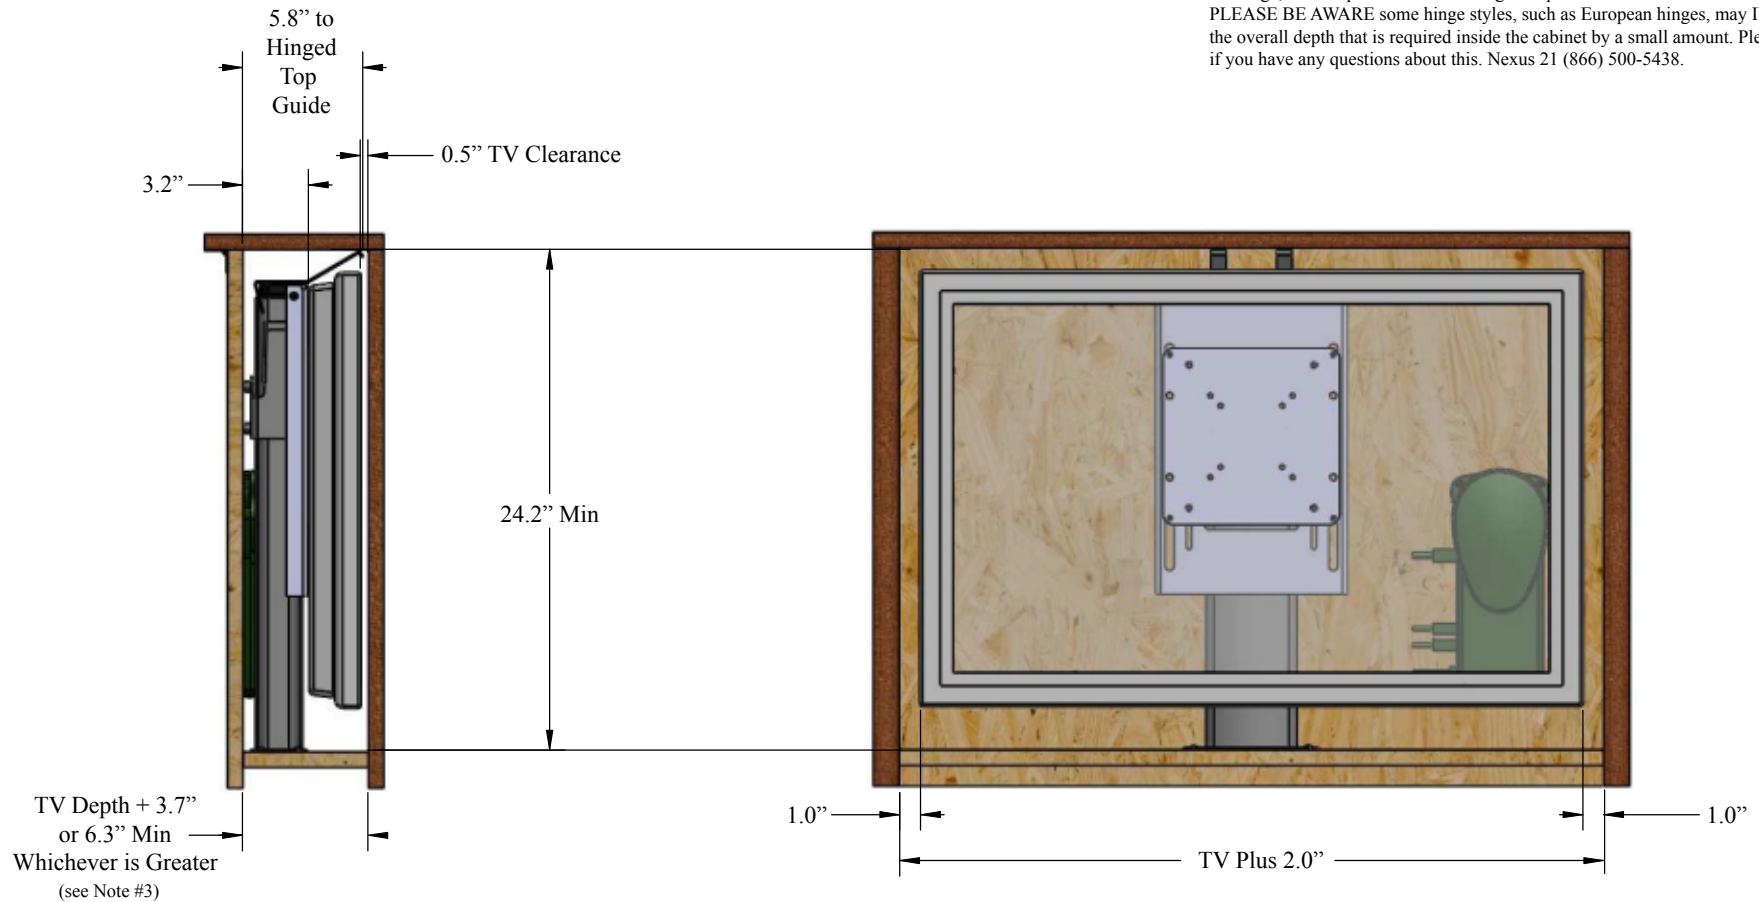

Notes:

- 1) The cabinet box shown is for reference only and is not provided with the TV Lift.
- 2) For this TV Lift, the length of its travel is 23".
- 3) TV manufacturers often only calculate the TV's depth dimension by measuring the screen from front to back at the thinnest point. When calculating the true depth of your TV, please be sure to consider the depth added by any protruding plastic housings or stand attachments on the back panel. Spacers will be required to accommodate the protrusion. (see photo at right)
- 4) TV not to exceed 22" in Height.



See Note #3: The stand has been removed but a protruding bump may remain on the back of your TV. If your TV has a bump similar to this, you must measure and add the depth of the bump when calculating the true depth of your TV. The depth dimension given by the TV manufacturer will never take this into consideration, and it will affect your minimum installation depth.