



DETAIL A
 SCALE 1 : 3

Rear Support Bracket

- 1) GENERAL EXPLANATION OF LID FUNCTION: Hinged lids require the use of the accessory "HINGED TOP GUIDES". These guides are mounted to the top of the lift system and will push the lid open as it rises. The lid will then remain standing, leaning against the back of the lift column. When the lift is lowered, the lid is closed by gravity.
- 2) NOTE ABOUT HINGES: The actual HINGES for the lid are part of your cabinetry, and are not provided by Nexus 21.
- 3) IMPORTANT NOTE About Depth Dimension: For the hinged lid to function properly, you MUST allow at least 2" of space between the pivot point of the hinge, and the back of the lift column. PLEASE BE AWARE some hinge styles, such as European hinges, may INCREASE the overall depth that is required inside the cabinet by a small amount. Please call us if you have any questions about this. Nexus 21 (866) 500-5438.

Model DL-39 Installation Dimensions: with Hinged Top



© 2010, Nexus 21, Inc. All Rights Reserved